



LED ΛΑΜΠΑ



Operation instructions

1. After power-on, it runs the last program which it turned off.
2. Remote control mode (pressing the button for more than 2 seconds, releasing it more than 2 seconds) The control system of this lamp is controlled by an 18-key 315MHZ wireless remote control transmitter (RF). The functions of the buttons are as follows

	Power On/Off		Yellow
	Automatic mode button, 14 change modes cycle from 1 to 14		Cyan
	Speed plus, a total of 10 speed grades		Purple
	Speed reduction, a total of 10 speed grades		White
	7 color Flashing		R-G-B Clockwise Jump Changing
	7 Color Jump		R-G-B Counterclockwise Jump Changing
	Red		RGB Gradual
	Green		6 Colors Gradual
	Blue		7 Colors Gradual

3. On and off power control Program
If you do not use the remote control, it can be controlled by turn on/turn off.
The specific operation method is as follows: After power-on, it runs the last program which it turned off.
Turn off the power, and then re-power the LED within 1~3S, it will be turn to next mode, R, G, B, RG, GB, RB, RGB, RGB jump changing mode (speed 4), BGR Counterclockwise Jump Changing (speed 4), 7 colors jump mode (speed 4), RGB gradual mode (speed 4), 6 colors gradual mode (speed 4), 7 colors gradual (speed 4), 7 colors flashing (speed 4) switching.
4. Memory and reset function:
 1. After power off, select the program mode within 2S
 2. After turned off 20 seconds, and then turn on, it remembers the last program
 3. Switch three times after 20s power off, it resets to the RGB jump mode when the third time power on.